
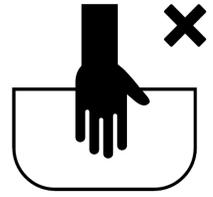


Instructions

Take a disposable plastic container. The size depends on the size of the model (hand, foot ...). The container should be tall, not wide.

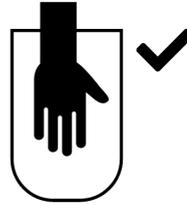

		Stage 1	Mix with	Stage 2	Mix with
Package type:	Sufficient for:	Elastic mold paste	Water	Ceramic casting powder	Water
Baby Edition	1 baby (0-10 years) hand	120 g = 1 bag	4 dl	350 g = 1 bag	0,9 dl
Adult edition	1 adult hand or 2 baby hands	240 g = 2 bags	8 dl	700 g = 2 bags	1,8 dl
Couple Edition	2 adult hands	480 g = 4 bags	1,6 l	1,4 kg = 4 bags	3,6 dl
Family Edition	4 adult hands	1 kg = 8 bags	3,4 l	3,0 kg = 8 bags	7,7 dl

Stage 1

- Mix water and Elastic Mold Paste in a plastic container. (See the mixing ratio table).
- Stir/Mix it for 15-30 seconds until there are no lumps seen (best to use electric mixer). The mixture should resemble cooked pudding. Rinse the electric mixer immediately with water.
- Insert the hand/foot or appropriate model into the prepared mixture. Important! The mixture must still be in liquid state when you insert hand/foot in the container.
- We recommend that the hand or foot is lubricated before inserting it in the mixture.
- Hold the hand/foot steady in the mixture until it completely solidifies. This can take up to 2 minutes. The colour changes from purple to white. Carefully remove the model (hand/foot) from the solidified mixture. The plastic container now holds a mold into which we will pour the liquid mixture.

Stage 2

- Mix water and Ceramic casting powder (See the mixing ratio table) in a separate container.
- Stir/Mix it for about 2-3 minutes. The mixture should be liquid, without lumps (best to use electric mixer).
- Pour the liquid mixture into the mold (into the first container).
- Wait about 45 minutes (room temperature) for the mixture to harden.
- Carefully remove the finished product together with the mold from the plastic container. Carefully remove the mold, using tweezers, a stick, a knife or tooth brush to remove the minor remains.

Your memory is made!

Share it on our social media.